





ALARM

In standby mode slide the alarm-slider  upwards ⇒


- **Enter time:** enable alarm clock ⇒ enter time ⇒ confirm with .
- The alarm clock rings every day at this time.
- **Off:** disable alarm clock by sliding the alarm-slider down

Press  to stop an ringing alarm.




Mute an ringing alam by pressing  (rings again in a minute).




TOPS NUMBERS



The Top5 Numbers are shown on the beginning of the phonebook entries. You can also use the Top 5 to dial by holding the corresponding key.



E.g. hold and press the , to dial the Top1 number.

Save a Top5 number:




Enter menu with  ⇒ choose **Phone book** with , 




⇒ choose **Top 5** with ,  ⇒ **Add Top 5** 

⇒ choose **Top 1, Top 2, ... Top 5** with , 

⇒ choose a number from Phone book with , 

Edit a Top5:

Enter menu with  ⇒ choose **Phone book** with , 

⇒ choose **Top 5** with ,  ⇒ **Exchange Top 5** 

OTHER FUNCTIONS IN SETTINGS

Slide the  SMS-Menu Slider downwards

⇒ go to **Settings**  ⇒

Sound & Alert:

To choose a phone profile (e.g. Silent) and configure your personal settings like ringtone and volumes.

Call waiting:

You can enable/diasble and check status to get a notification about an incoming call while having a phone talk.

Network settings:

Settings ⇒ **Network** ⇒ **Automatic** or **Manual selection**

Voicemail number:

Change the voicemail number

Security settings:

Edit the PIN code or to **Activate/Deactivate** the PIN code query or the **Phonecode** (default: 1234).

Please note: the Phonecode is a 4 digit code, for device-specific use, e. g. Reset to the factory settings, ...

Master reset:

Reset the phone to the factory settings

FREQUENTLY ASKED QUESTIONS


Screen shows: Insert SIM card! Only emergency call 112

⇒ Check the direction of the SIM card

Call failed: Entered the area code? Check the selected telephone number and area code again for accuracy.

The mobile telephone display is blank/black:

Telephone is in energy saving mode (press any key).

Or it is switched off ⇒ press  for 2 seconds to turn it on.

The mobile phone is not responding:

Remove battery, re-insert and switch on the device.

If still no response, please contact the Service Centre.

The charging process will not start:

It may take a few minutes. If no response after 10 minutes, please contact the Service Center.

SUPPORT

- **Emporia Service Center**

Industriezeile 36 · 4020 Linz · Austria

Phone: +43 (0)732 · 77 77 17 · 0

Web: www.emporia.eu

PACKAGE CONTENT

- Mobile phone
- Charging cable
- Battery: Li-Ion 3.7V / 1000mAh

WARRANTY

- This warranty is valid only if original emporia batteries were used.
- Mobile phone: 24 month
- Battery: 6 month

CORRECT USAGE

- This mobile phone is robust and designed for mobile operation. However, it must be protected from moisture (rain, bath...) and impact.
- Do not expose it to direct sunlight.
- Any utilization other than described above will cause damage to the device, and may be hazardous (electric shock, fire, etc.). The entire product must not be altered or rebuilt, and the housing must not be opened.
- The power plug is suitable only for use with residential-type outlets of the public mains with 230 Volt/ 50 Hz (10/16A) alternating current.

SAFETY INSTRUCTIONS

- Switch off the mobile phone in hospitals or in the vicinity of medical equipment, as the mobile phone may cause them to malfunction. Keep your mobile phone a minimum distance of 20 cm away from pacemakers, if it is turned on.
- Never drive a car while holding the mobile phone in your hand. Observe national law and traffic regulations governing the use of mobile phones in traffic.
- Always turn off your mobile phone inside an airplane.
- You must switch off the mobile phone in the vicinity of petrol stations and other places with explosive materials.
- Don't shine the light directly into the eyes of people or animals.
- If the speaker or headset is set to a high volume this can cause hearing damage. Never hold the phone to your ear when the speakerphone mode is activated or the emergency button is pressed.
- The device and its accessories may contain small parts. Keep this product out of reach of small children.
- As a precaution, we recommend disconnecting the charger from the phone during a thunderstorm.



DECLARATION OF CONFORMITY (DOC)

We, Emporia Telecom Produktions- und Vertriebs- GmbH & Co. KG. declare under our sole responsibility that the following product is in conformity with the following relevant harmonised standards.

Kind of product: **Dual Band Mobile Phone**

Article number: **V20mc**

Governing EU-regulations: Council Directive R&TTE 1999/5/EC

Radio equipment and telecommunications terminal equipment

Harmonized EN standards:

Safety & Health: EN 60950-1:2006/A12:2011;
EN 50360:2001; EN 62209-1:2006;
EN 62209-2:2010

EMC: EN 301 489-1 V1.9.2; EN 301 489-7 V1.3.1

Radio spectrum: EN 301 511 V9.0.2

CE 2200

Eveline Pupeter 01.06.2013, Linz/Austria
CEO 

TECHNICAL PRODUCT DESCRIPTION

- Dualband GSM 900/1800MHz
- Battery: Li-Ion 3.7V / 1000mAh
- Internal antenna: SAR 0.733 W/kg
- Stand-by-time: s00 h
- Dimensions: 114 x 55 x 15,5 mm
- Talk time: 4 h
- Weight: 86 g

DISPOSAL

Disposal of packaging:

Packaging and packaging materials are recyclable and should always be returned.

 
Disposal of batteries:

Batteries must not be disposed of with domestic rubbish!

As a consumer you are required by law to recycle used batteries. You may return them to your local collection point or to the dealer.

Disposal of the device:

Do not throw your mobile phone into the garbage, once it has outlived its usefulness. For the benefit of the environment, take it to a recycling location for used phones so it can be processed in an environmentally responsible way.

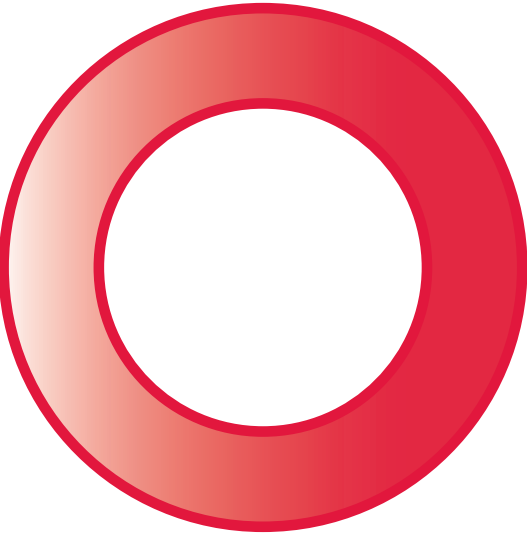

emporia **TALKbasic**

PartNo: V20mc_ShortManual-V2_40799-ENG_201308

INSERTING THE SIM CARD

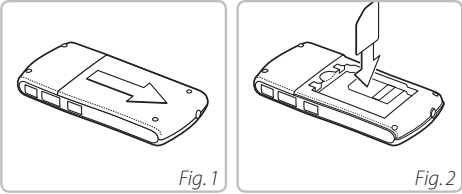 


Fig. 1: Remove the battery cover

Fig. 2: Insert the SIM card with the golden chip facing down

INSERT THE BATTERY AND CHARGING

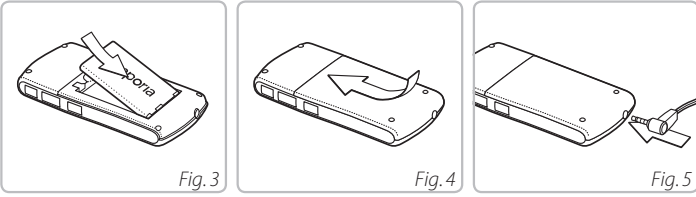 


Fig. 3: The battery contacts have to face the gold coloured contacts of the mobile phone.

Fig. 4: Slide battery cover back to its previous position until its locked with a click.

Fig. 5: Plug the charging cable into the socket

- Batterysymbol on front lights = charger contact is OK
- Battery is charging: bars in the battery icon fill up
- Battery is fully charged: bars in the battery icon stop moving

Please note: The battery should be charged for at least 4 hours before your first call. Use only batteries and chargers which are approved for use with this model.

